

# Measuring Guide:




## WALL SCREEN AND INSPIRE (MULTI-PANEL) SCREENS

### Measure for the net screen opening dimensions.

Begin by deciding where best to position the screen. The opening must be plumb, level and square and, the bottom guide of the retractable screen must rest on a flat, level and solid surface. Make any needed adjustments to the opening (or plan and allow for shimming) before measuring for the screen.

Determine the **net screen opening dimension** (width x height) as measured from the outermost edges of where the retractable screen will rest. Screens are then made to fit these dimensions. Manufacturing tolerances are **plus or minus 1/16"**. Because of this, we recommend that you **deduct an additional 1/16"** from the width and height dimensions that you submit in order to assure that the screen is not too tight in the opening during installation.

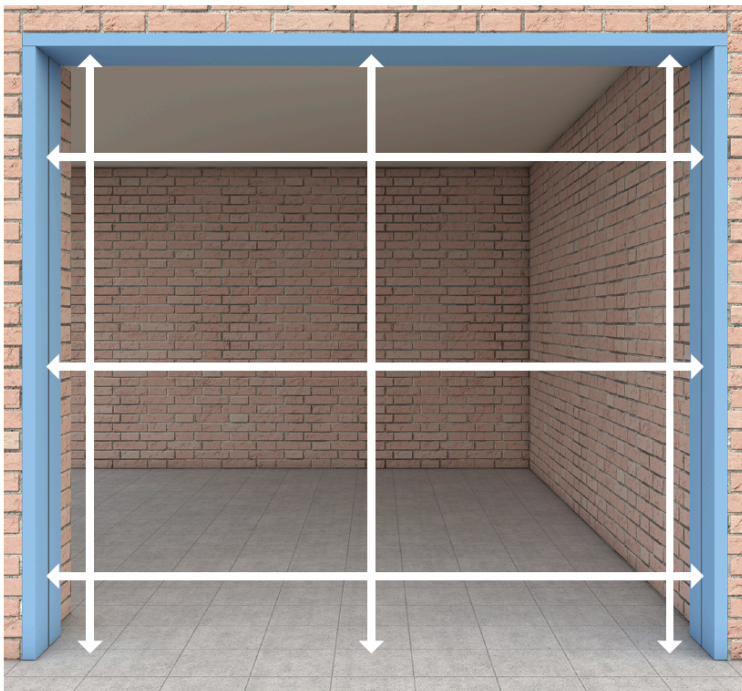

### RECOMMENDED INSTALLATION TYPE

Inside the Frame Installation  
(Recess / Inset Mounted)

### RECORD FINAL NET SCREEN OPENING DIMENSIONS

W \_\_\_\_\_


H \_\_\_\_\_

(Deduct 1/16" from the width and height to order).

### BEFORE YOU MEASURE

Before measuring, ordering and installing the screen, ensure that the opening is plumb, level and square and that the bottom of the opening has a flat, stable and smooth mounting surface. If needed, add a metal strip or other material (sourced elsewhere), to create a suitable surface for mounting the bottom guide rail of the retractable screen.


### EXAMPLES

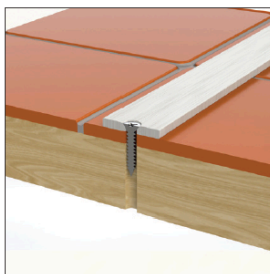

Uneven Tile Floor



Aggregate Cement Floor

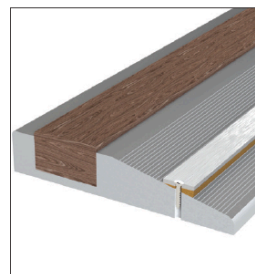

Angled Door Sill